

Enter Menu	Intro	Shortcut	Capturemode	Colormode	AEmode	AEcorrection	Autostandby	Overlay	KeySensitivity	KeyMode	Language	FactorySettings	Deviceinformation
Hold fingers on both upper touch fields													
and tap the Tip													
Exit Menu: Tap the Tip													
D-CAM Camera Menu													